

CM INSTALL INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS,
YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Getting Started:

Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:

- Track(s)
- Master carrier(s) & carriers (pre-installed within track)

Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure
- Hack saw (optional)

CM Track Ceiling Mount Instructions:

Installing Your Drapery Track:

You are now ready to install your Forest Drapery Track System.

- 1. Mark**
Hold your track in position on the ceiling and mark the screw hole spots where you will pre drill mounting holes.
- 2. Drill**
Pre-drill and insert anchors as needed for secure installation.
- 3. Attach Track**
Align track with pre-drilled holes and fasten with screws.

OPTIONAL : Drill directly through the flange if necessary for a secure installation.



CM INSTALL INSTRUCTIONS (CONTINUED)

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Ceiling Mount Instructions:

Installing Your Drapery Track:

You are now ready to install your Forest Drapery Track System.

1. Measure


Measure the width of the track and mark the two end brackets approximately 3" - 4" in from the ends of the track. Evenly space the remaining brackets and place corresponding marks.

2. Mount

To attach the bracket to the ceiling; first pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.


3. Attach Bracket

Place the track into the bracket as shown in the drawing; applying pressure until track "clicks" into bracket. Make sure track set screw is loose enough to allow the track retainer to flex. Repeat this step for the remaining brackets.

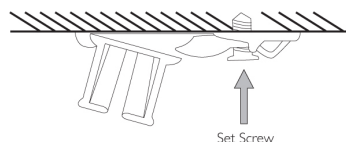

4. Tighten


Tighten track set screws on all the brackets to secure track to brackets.

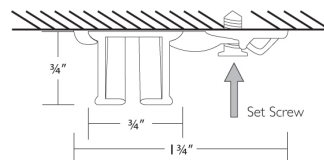

Installing Splice, if requested:

For wide areas, tracks will be shipped in multiple pieces and will require a splice.

- Slide the track of the connecting ends on each track into the channel of the splice and butt ends together.
- The tracks will snap together. Press together and confirm a tight fit.
- Secure with additional screw.

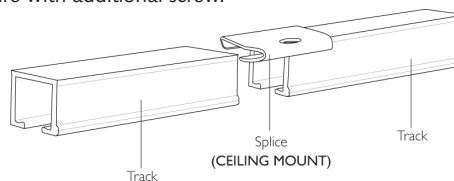

Installing Drapery Baton: (Baton Control Only)

You may attach a baton(s) to the master carrier(s). Simply fit the metal hook on the baton through the slot on the master carrier.

