


TECHNICAL SPECIFICATION:


- 3V battery type 2x CR2032
- battery life < 3 years
- frequency 433.92MHz
- touch screen
- max. 8 timing points for opening or closing
- transmit range indoor max. 30mtr
- working temperature -10°C - +50°C
- transmit power max. 10mW
- magnetic wall bracket
- white - 5201001481 black – 5201006481



INSERT BATTERIES

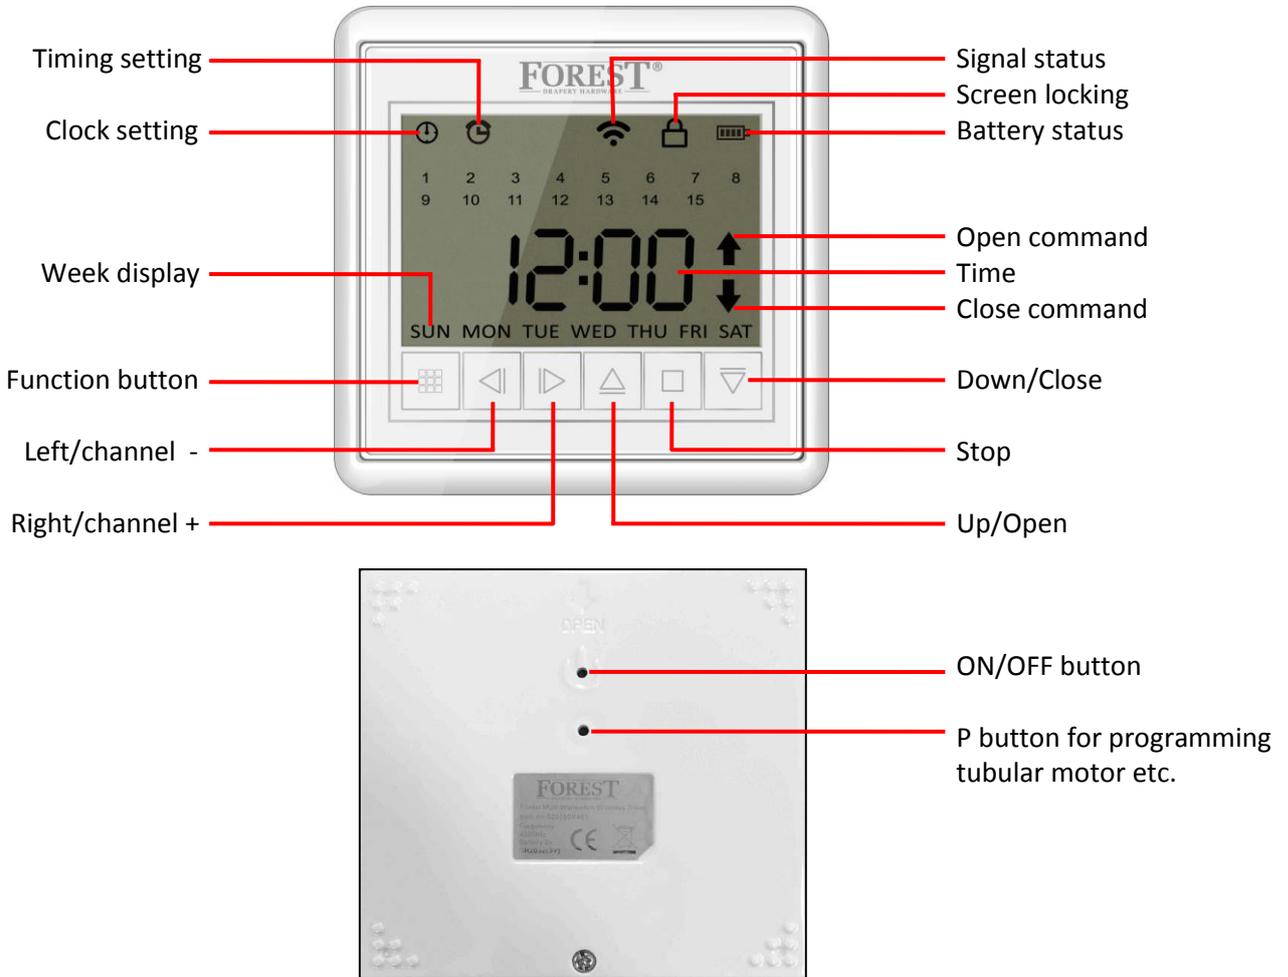

unscrew the back side of the housing and slide the cover downwards

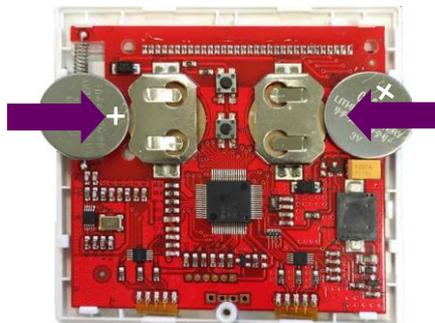

put in the two batteries mind the right polarity



WHEN BATTERIES ARE EMPTY:

After replacing the battery, the programmed receivers and motors will still function as normal. Also the timing points will stay in the memory, only the running clock must be adjusted. Please follow the local regulations for disposal of the empty batteries.

SET TIME AND DAY



press 2 sec. to unlock



press again for 4 sec.



press stop button



change hours ^ or v



press > button



change minutes ^ or v



press > button



change day ^ or v




press button for 4 sec. to save

SET TIMING POINTS

Up to 8 timing points can be set to this device. Each timing point can transmit an OPEN or CLOSE command.

Menu item tree:

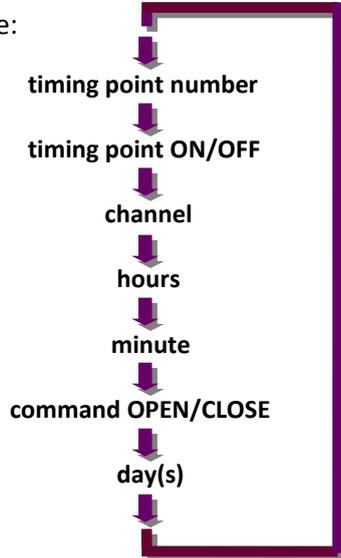

default:

- 1
- OFF
- ALL (channel 1 to 15)
- 12:
- :00
- OPEN
- ALL (Sun,Mon,Tue,Wed,Thu,Fri,Sat)

Use the < and > buttons to select in following order.
Use the UP (^), STOP (□) or DOWN (v) buttons to change the selected item

enter timing point setting:

press 2 sec. to unlock

press again for 4 sec.

press > button to select timer menu

press stop button to enter timing point setting

select timing point number

change to desired timing point 1....8

press > button to go to next step

switch ON/OFF

turn ON timing point ^ (or OFF v)

press > button to go to next step

select channel

select a single channel or ALL channels by pressing the stop button

press > button to go to hour settings

set hours

change hours ^ or v

press > button to go to minute settings

set minutes

change minutes ^ or v

press > button to go to OPEN/CLOSE settings

set command OPEN/CLOSE

select command: open ^ or close v

press > button to go to day settings

set day(s)

select day

activate/de-activate each day by pressing stop button
A selection of days can be made

save and exit

press button for 4 sec. to confirm and exit

how to make a motor group:

Maximum of 8 timing points can be made for opening or closing by timer.

Example:

3 curtain tracks, track A, B and C. Track A → channel 1, track B → channel 2, track C → channel 3.

All 3 tracks are also programmed to channel 4. This is the group-channel.

Timing point 1 is set to Open at 7AM, channel 4, Mon, Tue, Wed, Thu, Friday.

Timing point 2 is set to Close at 19PM, channel 4, Mon, Tue, Wed, Thu, Friday.

Timing point 3 is set to Open at 9AM, channel 4, Sat, Sunday.

Timing point 4 is set to Close at 20PM, channel 4, Sat, Sunday.

Individual manual control: use channel 1, 2 or 3.

Automatic opening and closing:

- Mon, Tue, Wed, Thu, Friday: Open 7AM, Close 19PM, track A, B and C
- Sat, Sunday: Open 9AM, Close 20PM, track A, B and C